

# Security Hitchlock Selector Guide

Using an SAS Hitchlock is a great way to make it difficult for your caravan or trailer to be stolen. All can be fitted when unhitched from your towing vehicle, but many also fit whilst stationary and hitched to your towing vehicle. Great for deterring motorway services thieves!

## TOWING EYE LOCKS



## HITCHLOCKS FOR UNBRAKED TRAILERS

Where the hitch is mounted directly to a fixed drawbar on the trailer.

### Pressed Steel Head

This is a hitch head pressed from a steel sheet – it will generally have a folded rim around the bottom. The metal is normally zinc plated and a relatively smooth finish.



### Bradley Cast Head


Cast hitch heads are thicker material and a slightly rough surface to touch.




### Straight Drawbar



### A-Frame Drawbar

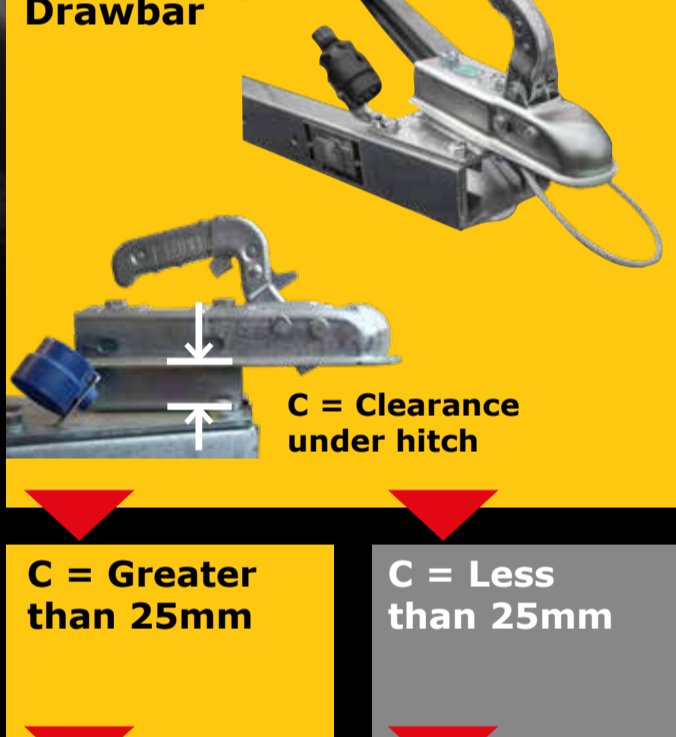

### Straight Drawbar

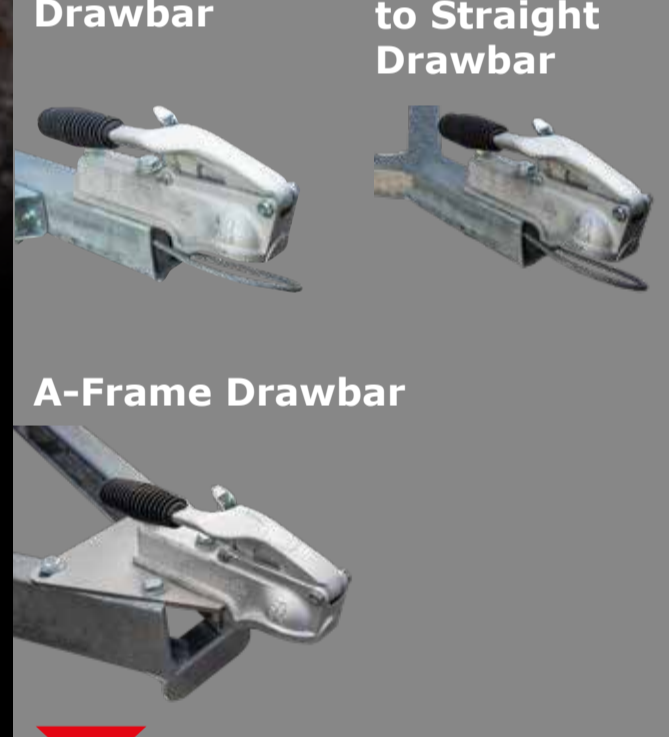

### A-Frame to Straight Drawbar

### A-Frame to Straight Drawbar




C = Greater than 25mm

C = Less than 25mm



## REPLACEMENT LOCKS FOR HITCH COUPLINGS

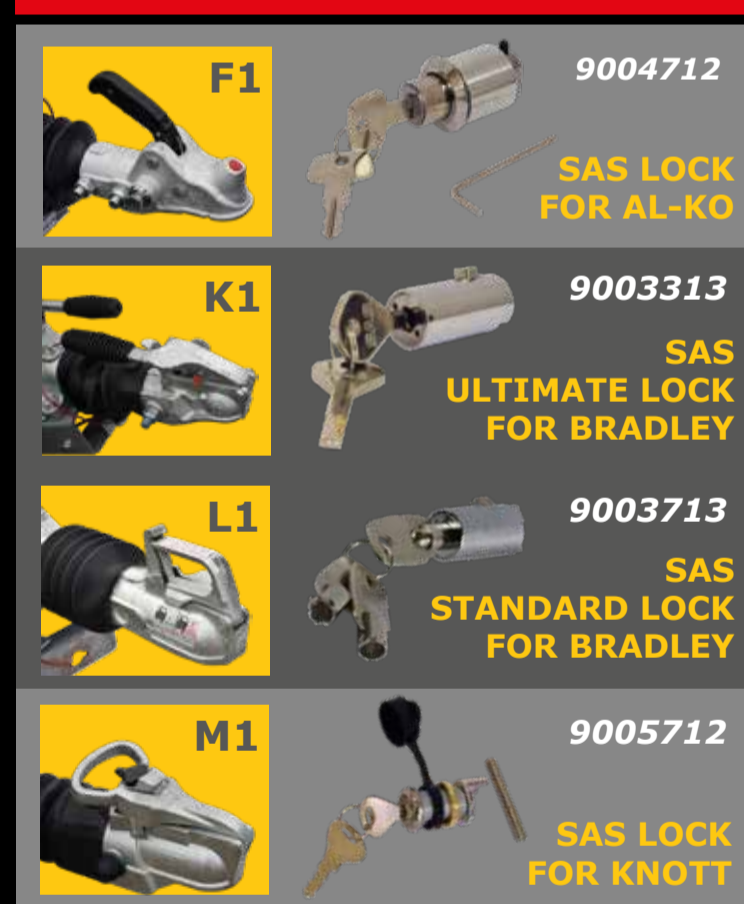

## HITCHLOCKS FOR BRAKED TRAILERS & CARAVANS

Braked trailers will generally have a rubber bellow directly behind the hitch, then a braking damper device mounted on the drawbar frame.



Hitch Manufacturer	Hitch Model	SAS Hitchlocks								
		2110761 FORT	2120761 FORT A	2130761 FORT B	2160761 FORT K	2170761 FORT T	2210731 FORT 2 GOLD	2310751 ORIGINAL HL1	2511195 COMPACT CONDOR	2541195 COMPACT EAGLE
See products pictured below →		211	212	213	216	217	221	231	251	254
A1	ALBE Cast Head	•*	•*							
B1	ALBE Pressed Head	•						•	•	
C1	AL-KO AK160, AK180, AK300	•					•	•		•
D1	AL-KO AK161, AK270	•*	•*						•	
E1	AL-KO AK350 Cast Head		•							•
F1	AL-KO AK301			•						
G1	AL-KO AK351, AK3500		•							
H1	AL-KO AKS1300						•			•
J1	AL-KO AKS2004						•			•
K1	Bradley Autohead 2.7 & 3.5kg			•			•			•
L1	Bradley Double Lock					•				
M1	Indespension Triplelock					•				
N1	KNOTT Avonride Cast Head		•							
O1	KNOTT Pressed Head				•				•	
O2	KNOTT K27 & K35 Cast Head		•							
P1	KNOTT Cast Head		•							
Q1	Westfalia SSK I/II/III								•	
R1	Winterhoff WW13	•						•	•	
S1	Winterhoff WW30 Cast	•*	•*			•		•	•	
T1	Winterhoff WW200 Cast		•							
	Winterhoff WS3000									•

\* For hitch with vertical fixing bolts use FORT A and horizontal bolts use FORT.

• Most Popular

• Alternative



**SECURE YOUR WORLD WITH SAS SECURITY PRODUCTS**

Thieves target trailers, caravans and anything lacking robust security devices!

Always ask for SAS Security Products, to reduce your risk of theft and loss.

+44 1444 675889 | sales@sasproducts.com | www.sasproducts.com

